

# Wheelman Flex Installation Guide

Fit Kit: 810-0035-01

## Fits the Following Vehicles

*Vehicles with a luxury cab have a thicker steering wheel. If your vehicle has a luxury cab, see the luxury cab installation Note on page 7 before installing the Wheelman Flex.*

Case IH Magnum		McCormick			Quadtrac			
180	260	MC	MTX		375	450	500	580
190	275	95	110	150	385	470	540	600
200	280	100	120	155	425	485	550	620
210	290	105	125	165	435			
215	305	115	135	175				
220	310	120	140	185	Rowtrac			
225	315	130	145	200	350	400	450	500
235	335	135			370	420	470	
240	340							
245	370	New Holland			Steiger			
250	380	T8.275	T8010	TG210	330	385	450	540
		T8.300	T8020	TG215	335	400	480	550
Case IH MX		T8.320	T8030	TG230	350	420	485	580
100	140	T8.330	T8040	TG245	370	430	500	600
100C	145	T8.350	T8050	TG255	380	435	535	620
110	150	T8.360		TG275				
120	170	T8.380		TG285				
135	180	T8.390		TG305	STX			
		T8.410			275	375	430	480
		T8.420			280	380	440	500
		T8.435			325	425	450	530
					330			

## How to Use This Guide

This installation guide lists all the parts and provides instructions on how to install Wheelman Flex on the above vehicles. Read this manual thoroughly before beginning the installation.

- 1 Read and understand all safety warnings - page 2
- 2 Review the list of tools/items you may need to install Wheelman Flex - page 2
- 3 Review how your Wheelman Flex parts fit together - starting on page 3
- 4 Install Wheelman Flex - starting on page 7

# 1 Safety Information

As the operator of the vehicle, you are responsible for its safe operation. The autosteering system is not designed to replace the vehicle's operator. After installation, ensure all screws, bolts, nuts, and cable connections are tight and all cables have been secured to prevent them from being damaged.

The warnings starting below and those throughout this manual (indicated by either graphic at right) provide information to identify hazards associated with potential injury or death and tell you how to avoid them.



Read and understand this manual and all the warnings below before installing, operating, or performing maintenance or service. **FAILURE TO DO SO MAY CAUSE IRREVERSIBLE DAMAGE TO YOUR SYSTEM.** Keep this manual and all related safety information with the manuals for your vehicle. For questions or further assistance, contact Customer Support.

## Safety Information and Warnings



To understand the potential hazards associated with the operation of an autosteer equipped vehicle, read the provided documentation before installing or operating the autosteering system.



To prevent accidental death or injury from being run over by the vehicle or automated motion of the steering system, never leave the vehicle's operator seat with autosteering engaged.



To prevent accidental death or injury from being run over by the vehicle, verify that area around the vehicle is clear of people and obstacles before startup, calibration, tuning, or use of autosteering.



To prevent the accidental engagement of autosteering and loss of vehicle control while driving on roads, shut down autosteering. Never drive on roads or in public areas with autosteering powered up.



To prevent accidental falls, maintain a stable position on the vehicle's platform or stairs when installing or removing the GPS antenna. If the vehicle does not provide a safe platform, use a ladder to safely access the vehicle's roof.



To avoid electrical shock hazards, remove the GPS antenna and/or other antennas from the vehicle before driving under low structures or low electrical power lines.

# 2 Tools/Items Needed for Installation

Make sure you have the right tools, such as:

- Wrenches, socket set, and screwdrivers
- Hex keys (3/16")
- Hammer or steering wheel puller (for luxury cab models only—see the luxury cab installation Note near the top of page 7)
- Torque wrench (in-lb)
- Tape measure (for vehicle measurements)


## 3 Parts for Your Installation

Use the diagrams that follow to:


- Below (steering column parts) and on page 4 (other parts) - verify you have all Wheelman Flex parts
- Page 5 - see an overview of cable connections
- Page 6 - see how the parts fit together around your steering column

### Steering Column Parts


The parts shown below comprise the Wheelman unit that fits around your steering column.

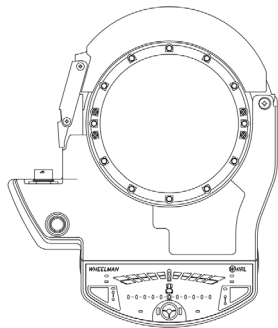

Wheelman Flex

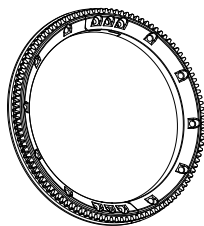

Main gear

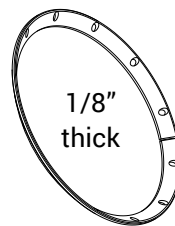

1/8"  
thick



1/4"  
thick




1/2"  
thick


Spacers (if needed, use the one that suits your installation)




Universal (flat)  
top ring

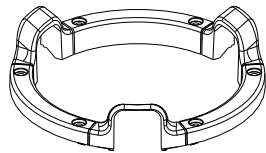

Custom  
top ring (2)

 


Socket head cap  
screws (6 each)

 


Button head  
screws (6 each)


See "Wheelman Flex Assembly for Installation on Steering Column" on page 6 for an exploded view drawing of how these parts fit together on the steering column.

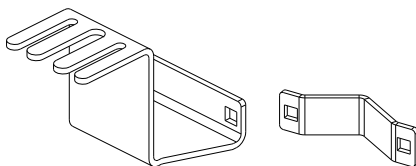


Anti-rotation bracket

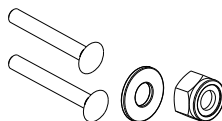

 Bracket hardware (2 each)  
L-to-R: bolts, washers, nuts







 
Flange, carriage bolts (2),  
and wing nuts (2)



Anti-rotation  
pin and sleeve


## Non-Steering Column Parts

The parts diagram below shows the Wheelman parts not installed at the steering column—they are installed elsewhere in and out of the vehicle cab.

 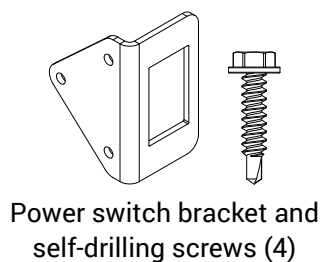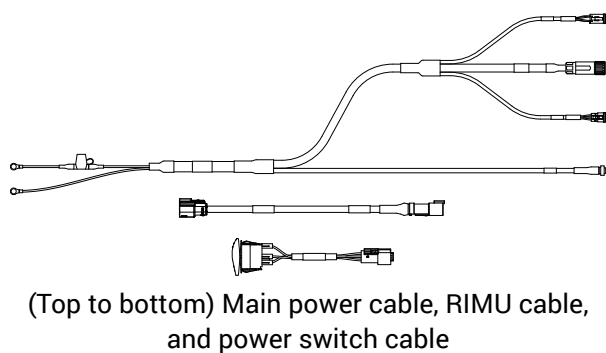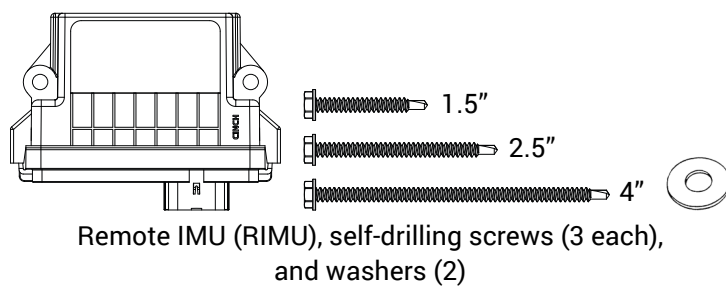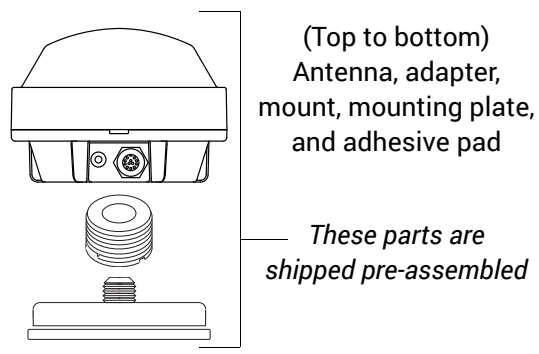

## Wheelman Flex Connection Diagram


Review the diagram below to see how the Wheelman Flex parts are connected using the cables. The diagrams on the next page show how the Wheelman Flex is assembled on the steering column.

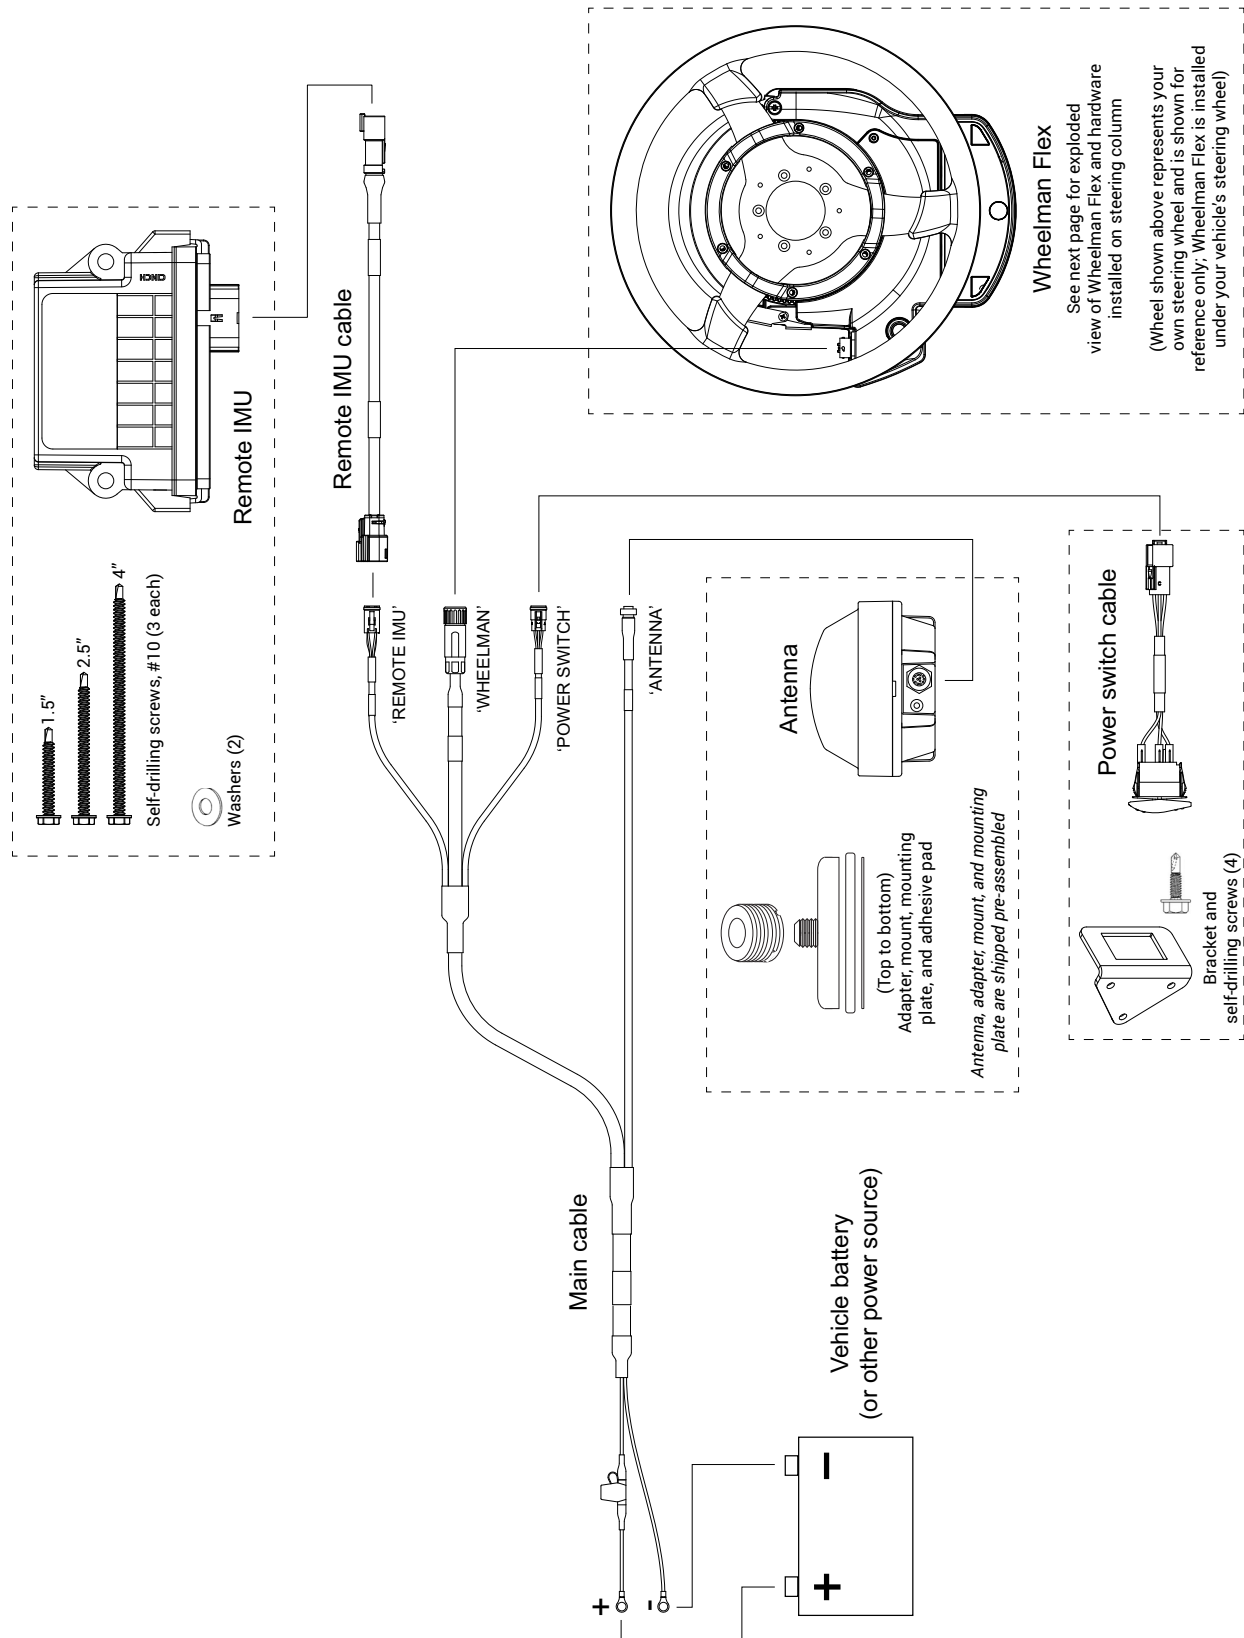


## Wheelman Flex Assembly for Installation on Steering Column

Use the figures below to help you assemble Wheelman Flex as described in the instructions starting on the next page.

**Bottom View**

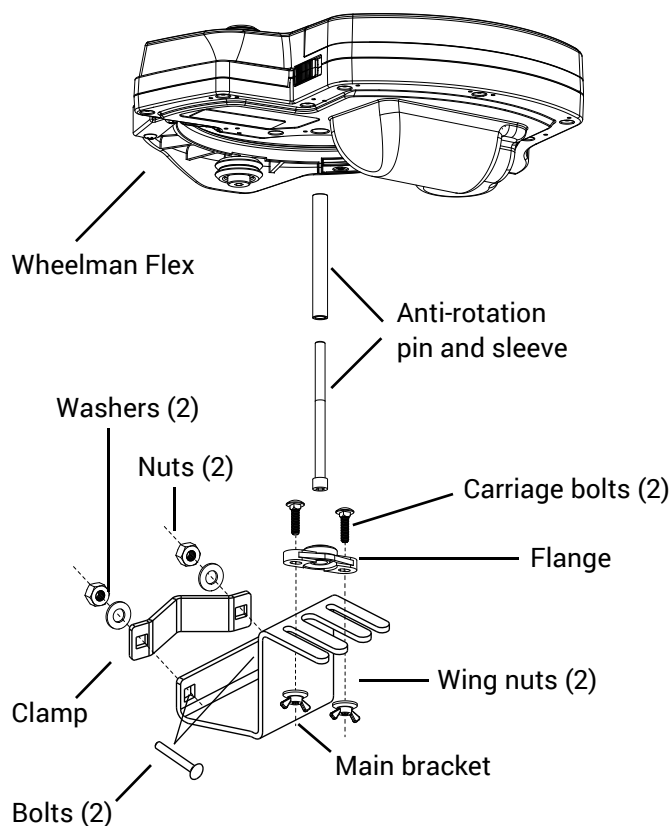

**Top View**

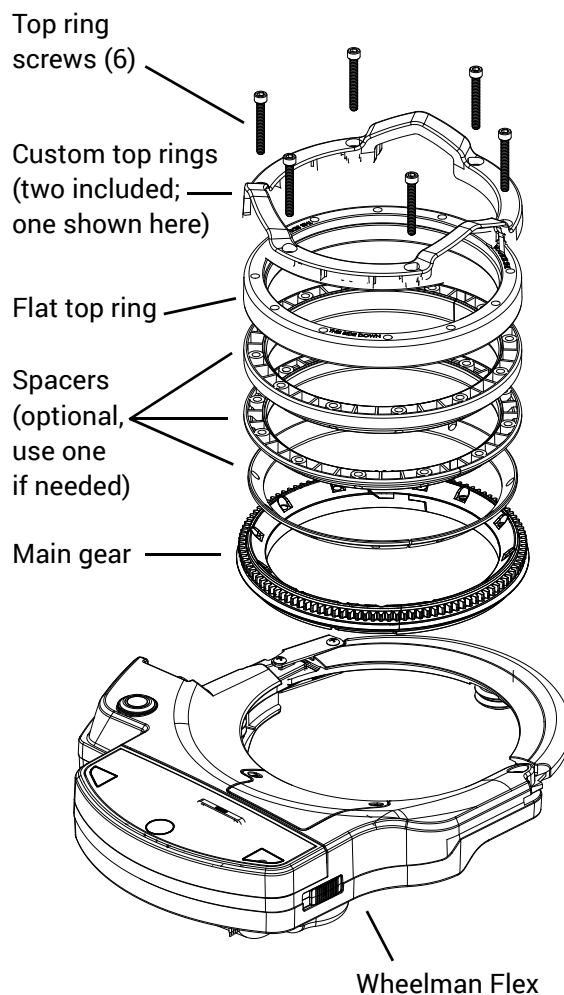

## 4 Install Wheelman Flex

Using the diagrams on the previous pages as a reference, complete the following sections to install Wheelman Flex on your vehicle.

### NOTE:

*Before beginning the installation:*

- *On a clean surface lay out all the components and check them against the diagram on the previous pages.*
- *Become familiar with the components and where they are to be installed.*
- *Work out how the harness is to be routed into/out of the cab (typically, through the rear window for closed cabs) to the battery and antenna. It is recommended to start at the battery and work back into the cab.*

### NOTE:

*Luxury cab vehicles only:*

*For vehicles with a luxury cab you may need to remove the steering wheel, add a spacer (not provided, such as one or more 3/4" flat washers), then reinstall the wheel to ensure there is enough clearance between the console and the Wheelman Flex.*

1. *Remove and retain the steering wheel center cap.*
2. *Remove and retain the steering wheel nut and washer.*
3. *Using a steering wheel puller, rubber mallet, or suitable tool, remove the steering wheel. If necessary, consult your equipment dealer if you are unsure of the correct procedure for removing the steering wheel.*




4. *Install the spacer.*
5. *Replace the steering wheel, reinstall the washer and nut removed in step 2, then reinstall the cap removed in step 1.*



## **a** Install the anti-rotation bracket

The anti-rotation bracket in your kit is specific to your vehicle. Using the parts diagram on page 3, the assembly diagram on page 6, and the photos that follow as reference, complete the following steps to install the bracket on the console below the steering wheel.

1. Just below the steering column, slide the rubber boot down to expose the metal column shaft. Alternatively, you can remove (cut away) the top inch or so of the boot.

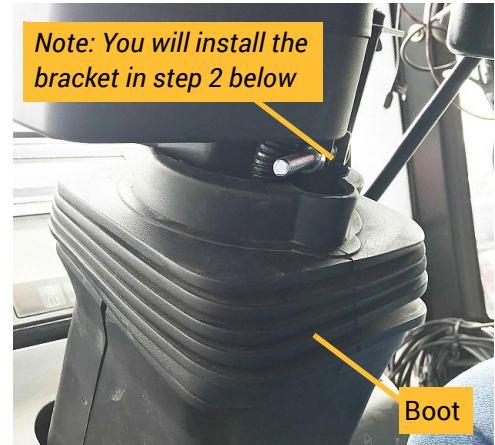


2. Assemble the anti-rotation bracket and clamp using the bracket hardware (bolts, washers, nuts) as shown at right. The fingers on the bracket should be approximately at the 2 o'clock position.

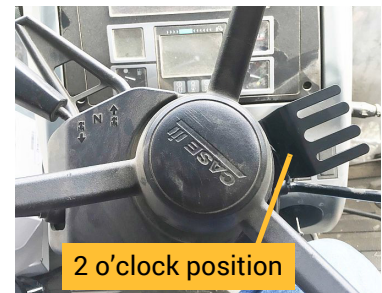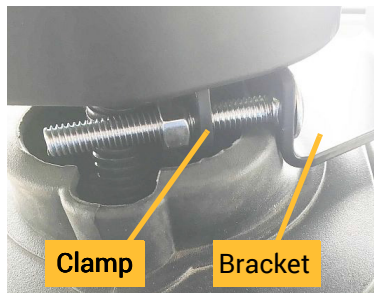



## **b** Install the main gear

1. Remove the four screws from the top side of the main gear, separate the two main gear halves, and retain the screws.

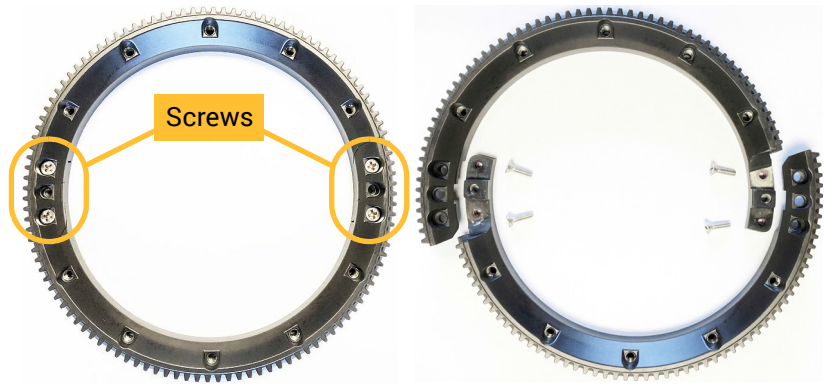

2. With the tops of the gear halves facing upward, place the two halves around the steering column below the wheel. Reconnect and the two halves and secure them together with the four screws you removed in the previous step.



## C Partially install the top ring


Upon installing the top ring, you may need to install the Wheelman Flex on the main gear to determine if one of the spacers is required. Thus, install/tighten only three of the six top ring screws because you will remove/reinstall the top ring if a spacer is required.

### NOTE:

*Your kit includes:*

- *Three top rings – two fitted rings (with humps that fit over the steering wheel spokes) and a universal ring (flat on both top and bottom). One of the fitted rings should work with most installations; however, you may need to use the universal ring if neither fitted ring correctly fits your wheel.*
- *Three sets of top ring screws – each set is a different length. Use the shortest screws that are long enough to secure the ring to the main gear. For example, if you use a spacer, you may need to use longer screws.*
- *Three spacers – each spacer is a different height. If one is needed, use the one that suits your installation. For example, a steering wheel with a soft covering material or a flat steering wheel may require installation of a spacer to avoid interference with the Wheelman Flex. See section e on page 12.*


1. Place the top ring on top of the steering wheel. Use one of the fitted top rings first; if you feel neither properly fits your vehicle, use the universal top ring instead.
2. Rotate the main gear so the holes in the top ring align with the holes in the main gear.
3. Loosely install three of the socket head cap screws:
  - a. Install the screws in an alternating pattern (1, 4, and 5; or 2, 3, and 6) to evenly attach the top ring to the main gear (the top ring should be parallel to the main gear—the same distance from the main gear at all points).

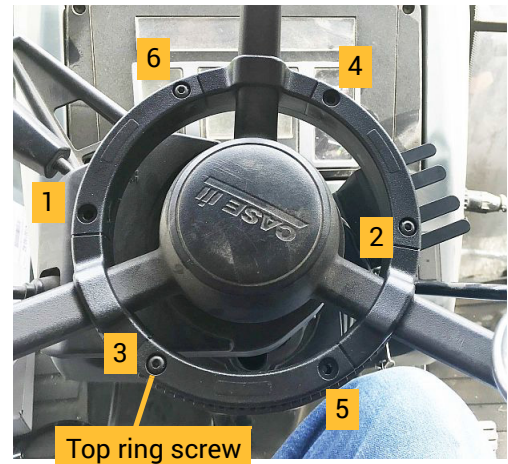

- b. Make sure the top ring is centered on the wheel. For example, make sure the outer edge of the ring is the same distance (along the wheel spokes) to the steering wheel cap (example installation at right).

The steering wheel shown at right may be slightly different than your model, but the measurement procedure is the same.

- c. Torque screws to 6 in-lb. **DO NOT OVERTIGHTEN.**
4. Slightly rotate the steering wheel and watch for off-center movement of the main gear. Retighten screws as necessary.

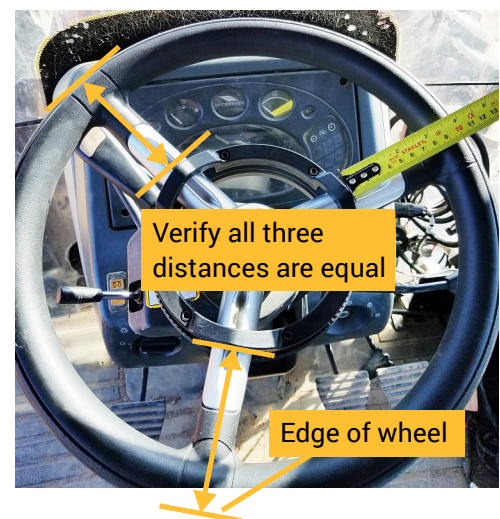


## **d** Install the Wheelman Flex onto the main gear

1. Open the Wheelman Flex latch as shown at right.



2. Fully open the Wheelman Flex then fit it around the main gear, such that:

- a. The beveled edge of the gear fits into the three Wheelman Flex rollers.

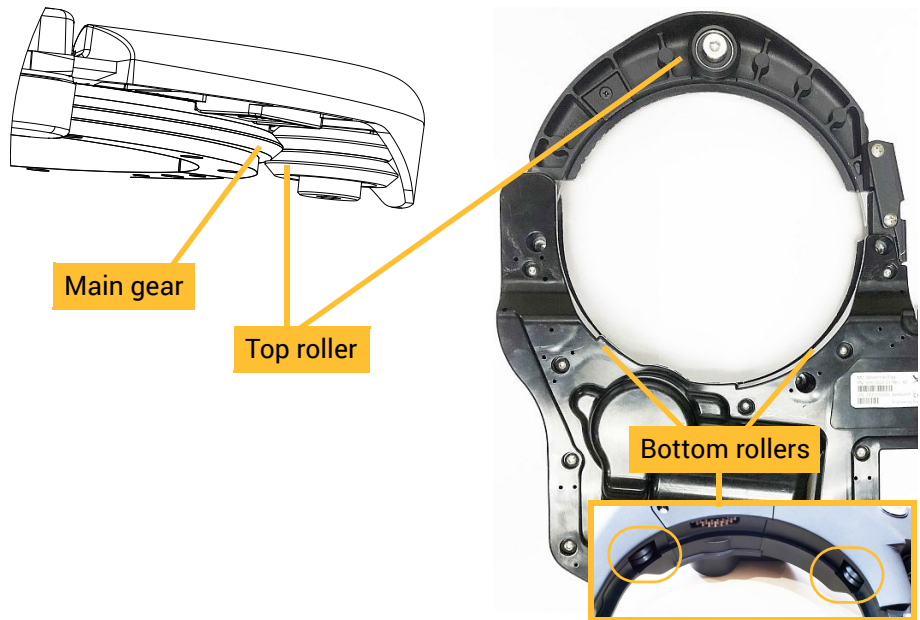

- b. The Wheelman Flex will be oriented similar to shown at right. Close the latch. You will rotate the Wheelman Flex in section f on the next page when installing the anti-rotation pin/sleeve, so having the Wheelman Flex in the position shown at right will require only a minor adjustment to its position.
- c. There is clearance above and below the Wheelman Flex—make sure the Wheelman Flex does not contact the steering wheel or push against the console.

**If there is not enough clearance between the Wheelman Flex and the steering wheel, install one of the spacers. Go to section e on the next page.**

**If you have sufficient clearance, install the remaining three top ring screws until snug (DO NOT OVERTIGHTEN) per step 3 on the previous page, then go to section f on the next page.**





## e (Optional) Install a spacer

If a spacer is needed, determine which included spacer is suitable for your vehicle, then install the spacer around the steering column between the steering wheel and the main gear. Each spacer has a slit that enables you to flex it as needed to open it and fit it around the steering column. Make sure the beveled (angled) side of the spacer is facing downward/inward so it rests easily in the main gear. The photos below show how each spacer fits into the main gear.



Gear with 1/8" spacer



Gear with 1/4" spacer




Gear with 1/2" spacer


1. If you installed the Wheelman Flex to determine if you need a spacer, remove the Flex by undoing the latch (left side of Flex), opening the Flex, then gently pulling it away from the main gear (the reverse of the steps in section d on the previous page).
2. Remove the top ring screws (the reverse of the steps in section c on page 10).
3. At the slit in the spacer, grab both sides and gently twist them in opposite directions to create enough of an opening to place the spacer around the steering column and (as shown in the above photos) on top of the main gear.
4. Reinstall the top ring and Wheelman Flex per the steps in previous sections c and d. Remember to tighten the top ring screws until snug - **DO NOT OVERTIGHTEN**.

## f Install the anti-rotation assembly

1. Insert the carriage bolts into the left and right holes of the top of the flange, screw the wing nuts onto the bolts just enough so they stay on the bolts, then slide the flange assembly onto the bracket as shown at right. Loosely tighten the wing nuts. You will fully tighten them later.
2. Insert the anti-rotation pin into the sleeve (if not pre-assembled), slide them through the flange from the bottom, then screw the pin into the Wheelman Flex (see at right).
3. Ensure the pin/sleeve assembly moves smoothly through the flange as the steering column is extended and retracted, then tighten the three bracket-retaining screws and the flange wing nuts.

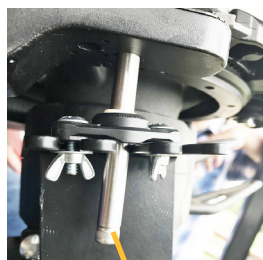

Pin through flange then into Flex

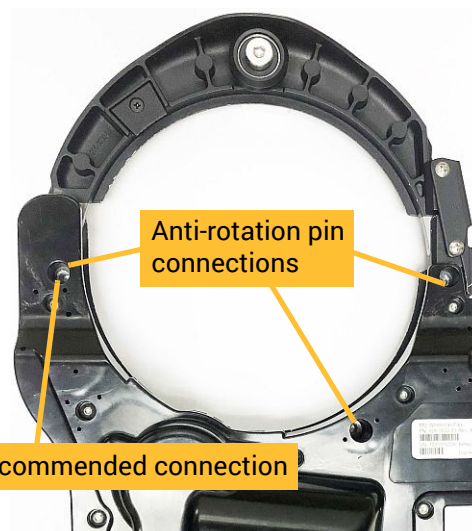

Anti-rotation pin connections

Recommended connection

## **g** Install the Remote IMU (RIMU)

The Remote IMU (sometimes referred to as a gyro, but actually contains a set of gyros and accelerometers) measures your vehicle's movement in all directions to enable Wheelman to more precisely autosteer your vehicle.

**⚠ WARNING:** *Before drilling (or using self-drilling screws) in the cab, make sure there is nothing that can be damaged by the drilling or by any self-drilling screws used to secure the RIMU. Secure anything that could be damaged away from where the screws come through. The photo at right is an example of a pre-drilling check; it shows an under-floor cabling compartment.*




When installing the Remote IMU (RIMU):

- The mounting location must be solid to the vehicle frame or cab and be vibration-free.
- The RIMU must not move independently of the vehicle (not loose on the cab floor).
- The RIMU must be square to the floor and to the centerline of the vehicle.
- There must be sufficient clearance around the seat to accommodate the RIMU as the seat suspension moves up and down even with the seat at its lowest level (for example, with all the air removed).
- There must be sufficient clearance to rotate the seat without interfering with the RIMU.
- Do not mount the RIMU where it can:
  - Interfere with any of the vehicle's seat or other control levers and knobs.
  - Interfere with the operator's visibility while operating the vehicle.
  - Be damaged by falling objects or where other materials can be piled on it.

To install the Remote IMU:

1. Review the requirements above.
2. Using the two self tapping hex screws and washers, install the RIMU in your preferred location. Do not overtighten.


The photo at right shows the RIMU installed on the cab floor, to the right of the operator's seat, with the X-Y label pointing up, and with the connector pointing toward the rear. **You will enter the label and cable directions during vehicle setup in the Whirl app.**

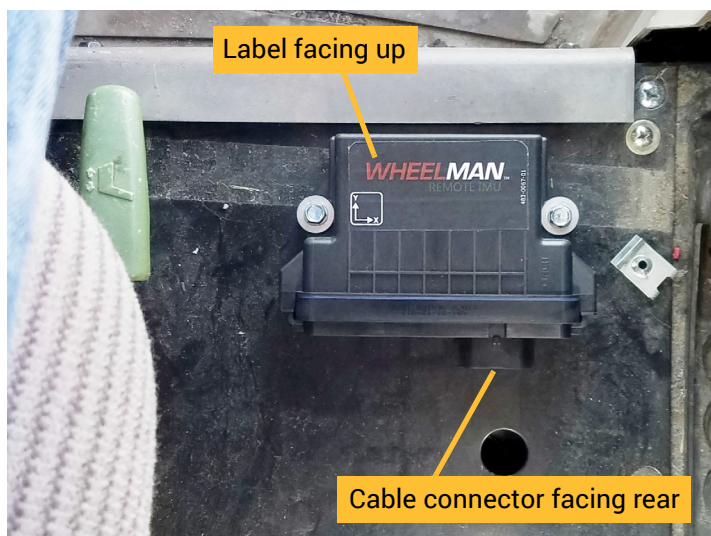

## **h** Mount the antenna on the vehicle roof

The antenna, adapter, and mount (at right) are shipped pre-assembled.

Once you place the mounting plate on the vehicle roof, you will not be able to move it. Therefore, plan your antenna location carefully.

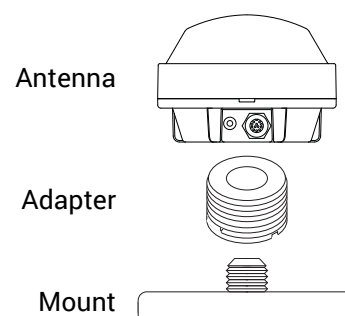

To mount the antenna on the vehicle roof:

1. Clean and dry the vehicle surface where you will attach the antenna mounting plate.
2. Remove the paper backing from the adhesive on the back of the mounting plate (see photo at right).




3. Position the mounting plate and press down hard for proper adhesion. When determining the location of the mounting plate, ensure that when you mount the antenna on the plate (next step) the antenna will be on the vehicle's centerline and pivot line.

**NOTE:**

*Depending on your vehicle, if you cannot place the antenna on the centerline and/or pivot line, place the antenna as close as possible to these lines.*

*Measure the antenna left/right offset (distance left or right of centerline of antenna center) and the antenna pivot (distance front or rear of pivot line of antenna center). You will enter these values in the Whirl app during vehicle setup.*

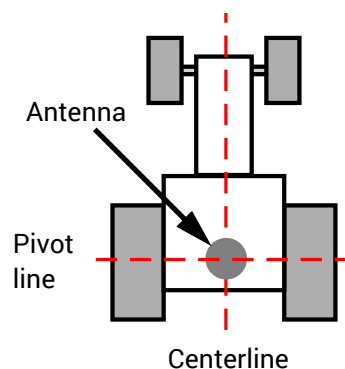

4. Ensure the antenna assembly (antenna, adapter, mount) is securely tightened, then place the assembly on the mounting plate (see photo at right).




## **i** Route and connect the cables

Using the “Wheelman Flex Connection Diagram” on page 5 as a guide, connect the cables included in your kit (main cable, Remote IMU cable, power switch cable) to the appropriate parts.

When routing cables:

- Stow cabling under carpets and at the edges of the cab.
- Store excess cable lengths with a minimum six-inch bend radius.
- Avoid high-temperature exposure (for example the exhaust, exhaust manifold).
- Hand tighten cables only—do not use tools.
- When connecting the main cable to the antenna, note the nub on the antenna's connector and the notch on the cable end (see near right). To connect the cable, align the notch with the nub, push the cable onto the antenna connector, then twist to the right to lock it in place (see far right).

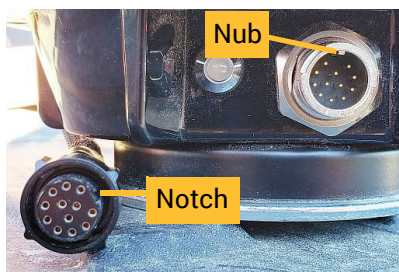

### **NOTE:**

*Some machines are equipped with pop out tabs that you can remove and replace with the power switch (see near right). If no tab is available, you can use the power switch bracket (see far right), mounting it in the cab in your preferred location. Turn the power switch off before connecting the main cable to the battery.*



**Congratulations on successfully installing your Wheelman Flex. Return to the Quick Start Guide to finish setup.**